


Clarke Vision 38I / 32I / 26I  
Rear Cover Assembly Drawing 4/94

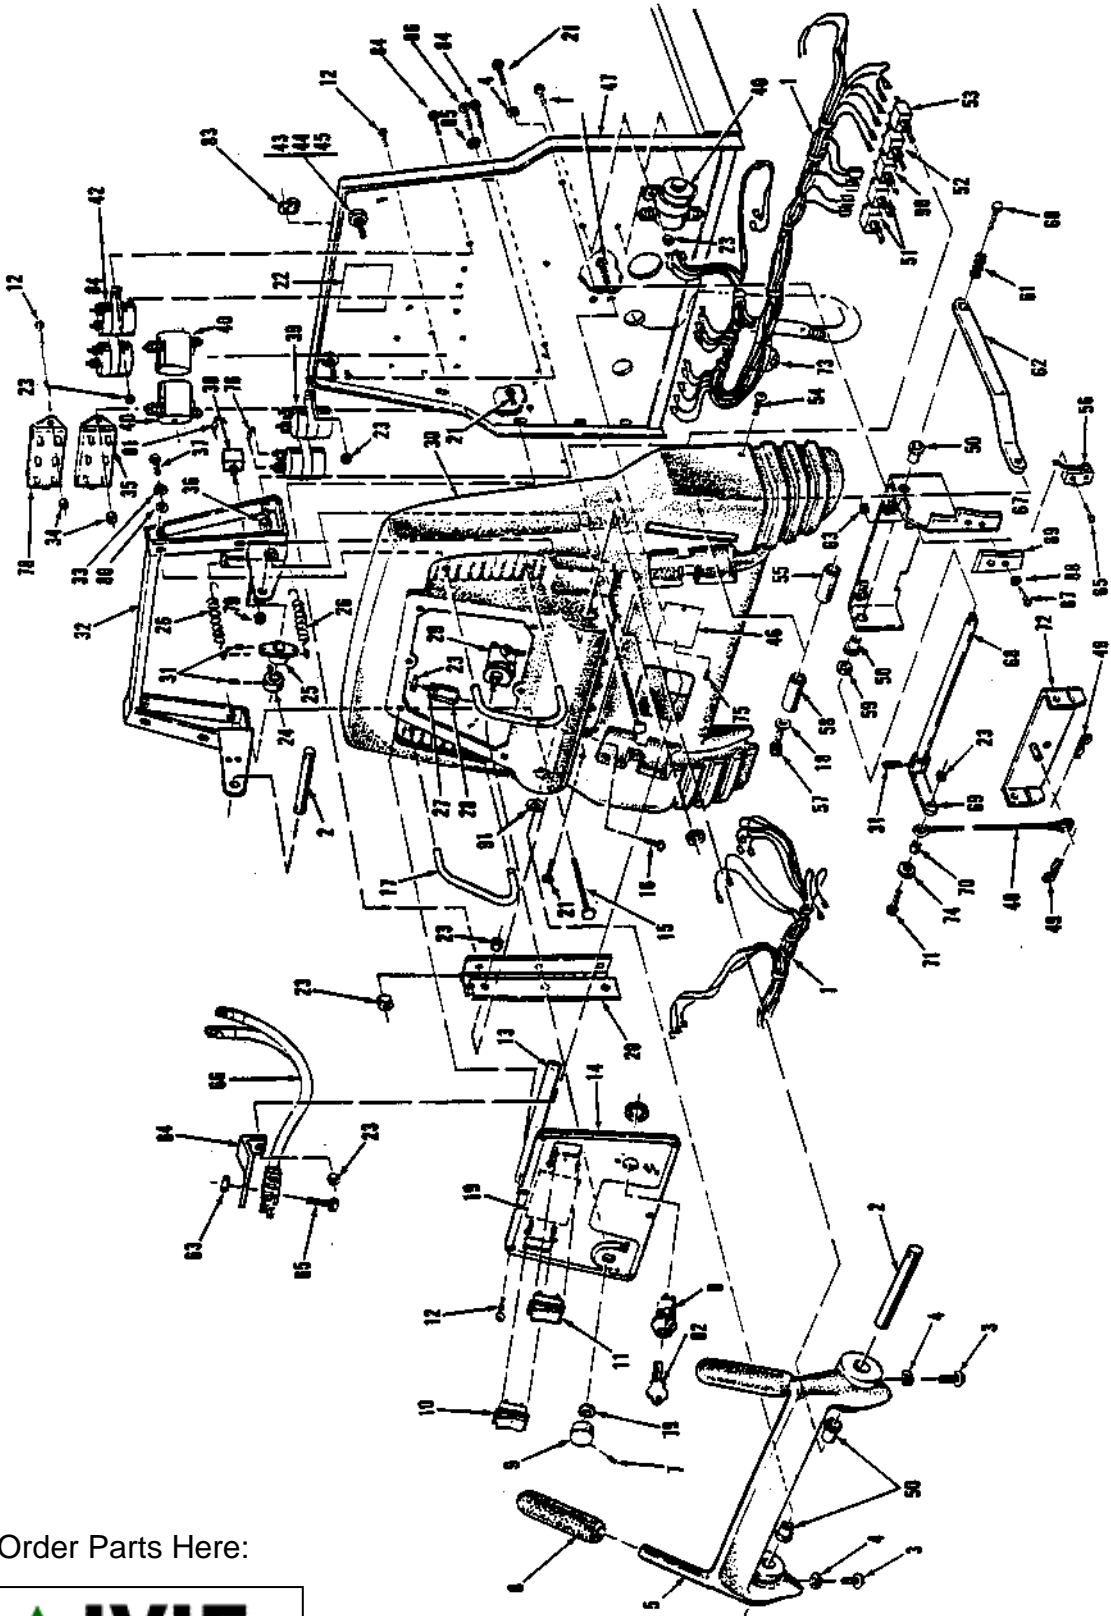

Order Parts Here:

  
[www.ivie-ent.com/parts](http://www.ivie-ent.com/parts)  
Ph:(918)254-5161


**Clarke Vision 381 /321 / 261**  
**Rear Cover Assembly Parts List 3/94**

Ref #	Part No.	Description	Qty	381	321	261
1	49699C	Main Harness	1	x	x	x
2	66533A	Handle Pin	2	x	x	x
3	85390A	Screw, ¼-20 x 1¼ PN	2	x	x	x
4	980657	Washer, Lock 1/4	2	x	x	x
5	24307A	Control Handle	2	x	x	x
6	34608A	Control Handle Grip	2	x	x	x
7	962262	Screw, 8-32 x ¼ Set	2	x	x	x
8	47380A	Key Switch, W/Key	1	x	x	x
9	55502A	Knob	1	x	x	x
10	47381A	Switch	1	x	x	x
11	47383A	Switch	1	x	x	x
12	962968	Screw, 10-24 x ½ PN	10	x	x	x
13	34264A	Gasket	2	x	x	x
14	66390A	Console Panel	1	x	x	x
15	80011A	Screw, ¾-16 x 3 CR	2	x	x	x
16	85395A	Screw, ¼-20 x ½ PN	1	x	x	x
17	64462A	Stationary Handle	2	x	x	x
18	980666	Washer, Starlock ¾	1	x	x	x
19	77096B	Wiring Label	1	x	x	x
20	64508A	Cover Hinge	1	x	x	x
21	85391A	Screw, ¼-20 x ⅝ PN	8	x	x	x
22	77101B	Wiring Label	1	x	x	x
23	81104A	Nut, ¼-20 ESNA	20	x	x	x
24	61651A	Control Switch Collar	1	x	x	x
25	60662A	Centering Bracket	1	x	x	x
26	53038A	Spring	2	x	x	x
27	83302A	Stud	1	x	x	x
28	854849	Insulator	1	x	x	x
29	61652A	Solution Control	1	x	x	x
30	32362A	Rear Cover	1	x	x	x
31	32363A	Rear Cover	1	x	x	x
32	962304	Screw, ⅝-18 x ½ Set	4	x	x	x
33	68275A	Cover Support	1	x	x	x
34	980652	Washer, Lock ⅝	4	x	x	x
35	920296	Nut, 10-24 ESNA	2	x	x	x
36	46313B	Relay	1	x	x	x
37	81301A	Nut, ¾-16 Jam	2	x	x	x
38	85813A	Screw, ⅝-18 x ¾ HX	4	x	x	x
39	47384C	Toggle Switch	1	x	x	x
40	41801A	Contactor	2	x	x	x
42	911490	Contactor	3	x	x	x
43	41802A	Contactor	2	x	x	x
44	831105	Tank stop Brushing	2	x	x	x
45	836707	Pin	2	x	x	x
45	920280	Nut, ⅝-18	2	x	x	x

Ref #	Part No.	Description	Qty	381	321	261
46	73709A	Warning Plate	1	x	x	x
47	63340A	Frame Weldment	1	x	x	x
	63336A	Frame Weldment	1			x
48	61653A	Squeegee Lift Cable	1	x	x	x
49	856702	Hairpin	2	x	x	x
50	902731	Nyliner Bushing	4	x	x	x
51	41422A	Circuit Breaker, 25A	2	x	x	x
52	41439A	Circuit Breaker, 25A	1	x	x	x
53	41423A	Circuit Breaker, 5A	1	x	x	x
54	85518A	Screw, ¼-20 x ¾ PN	5	x	x	x
55	64464A	RH Handle	1	x	x	x
56	47388A	Switch Asm., Vac	1	x	x	x
57	85389A	Screw, ¾-16 x ⅝ PN	1	x	x	x
58	64465A	LH Handle	1	x	x	x
59	87029A	Washer, Flat ¾	1	x	x	x
60	960510	Bolt, Pivot	1	x	x	x
61	438360	Spring	1	x	x	x
62	65617A	Squeegee Lift Lever	1	x	x	x
63	920056	Nut, 6-32 ESNA	4	x	x	x
64	60676A	Power, Conn. Bracket	1	x	x	x
65	962980	Screw, 6-32 x 1 PN	4	x	x	x
66	41140A	Console Cable Assembly	1	x	x	x
67	61254A	Squeegee Lift Bracket	1	x	x	x
68	67453A	Squeegee Lift Shaft	1	x	x	x
69	65614A	Cable Lever	1	x	x	x
70	608210	Spacer	1	x	x	x
71	85700A	Screw, ¼-20 x 1 Hx	1	x	x	x
72	Pg. 30	Pin Bracket ref. #25	1	x	x	x
73	853345	Fuse, 15A	1	x	x	x
74	980651	Washer, Flat ⅝	1	x	x	x
75	930093	Rivet	2	x	x	x
76	42401A	Diode Assembly	6	x	x	x
77	47374A	Limit Switch, Vac	1	x	x	x
78	46315B	Relay, .5 sec.	1	x	x	x
79	87202A	Washer, Lock	1	x	x	x
80	980205	Washer	4	x	x	x
81	42404A	Diode Asm.	1	x	x	x
82	55413A	Key	1	x	x	x
83	51867A	Clamp, Cable	1	x	x	x
84	170915	Screw, ¼-20 x ¾ Hex	16	x	x	x
85	87026A	Washer, Flat ¼	2	x	x	x
86	85700A	Screw ¼-20 x 1 Hex	2	x	x	x
87	962546	Screw, #10-24 X ½	2	x	x	x
88	980675	Washer	2	x	x	x
89	68643A	Plate, Wear	1	x	x	x
90	41444A	Circuit Breaker - 30A	1	x	x	x
91*	87029A	Washer	1	x	x	x

NOTE: \* Use if needed to remove slack from assembly


Clarke Vision 38I/32IX/32I/ 26IX/26I  
Traverse System Assembly Drawing 11/93

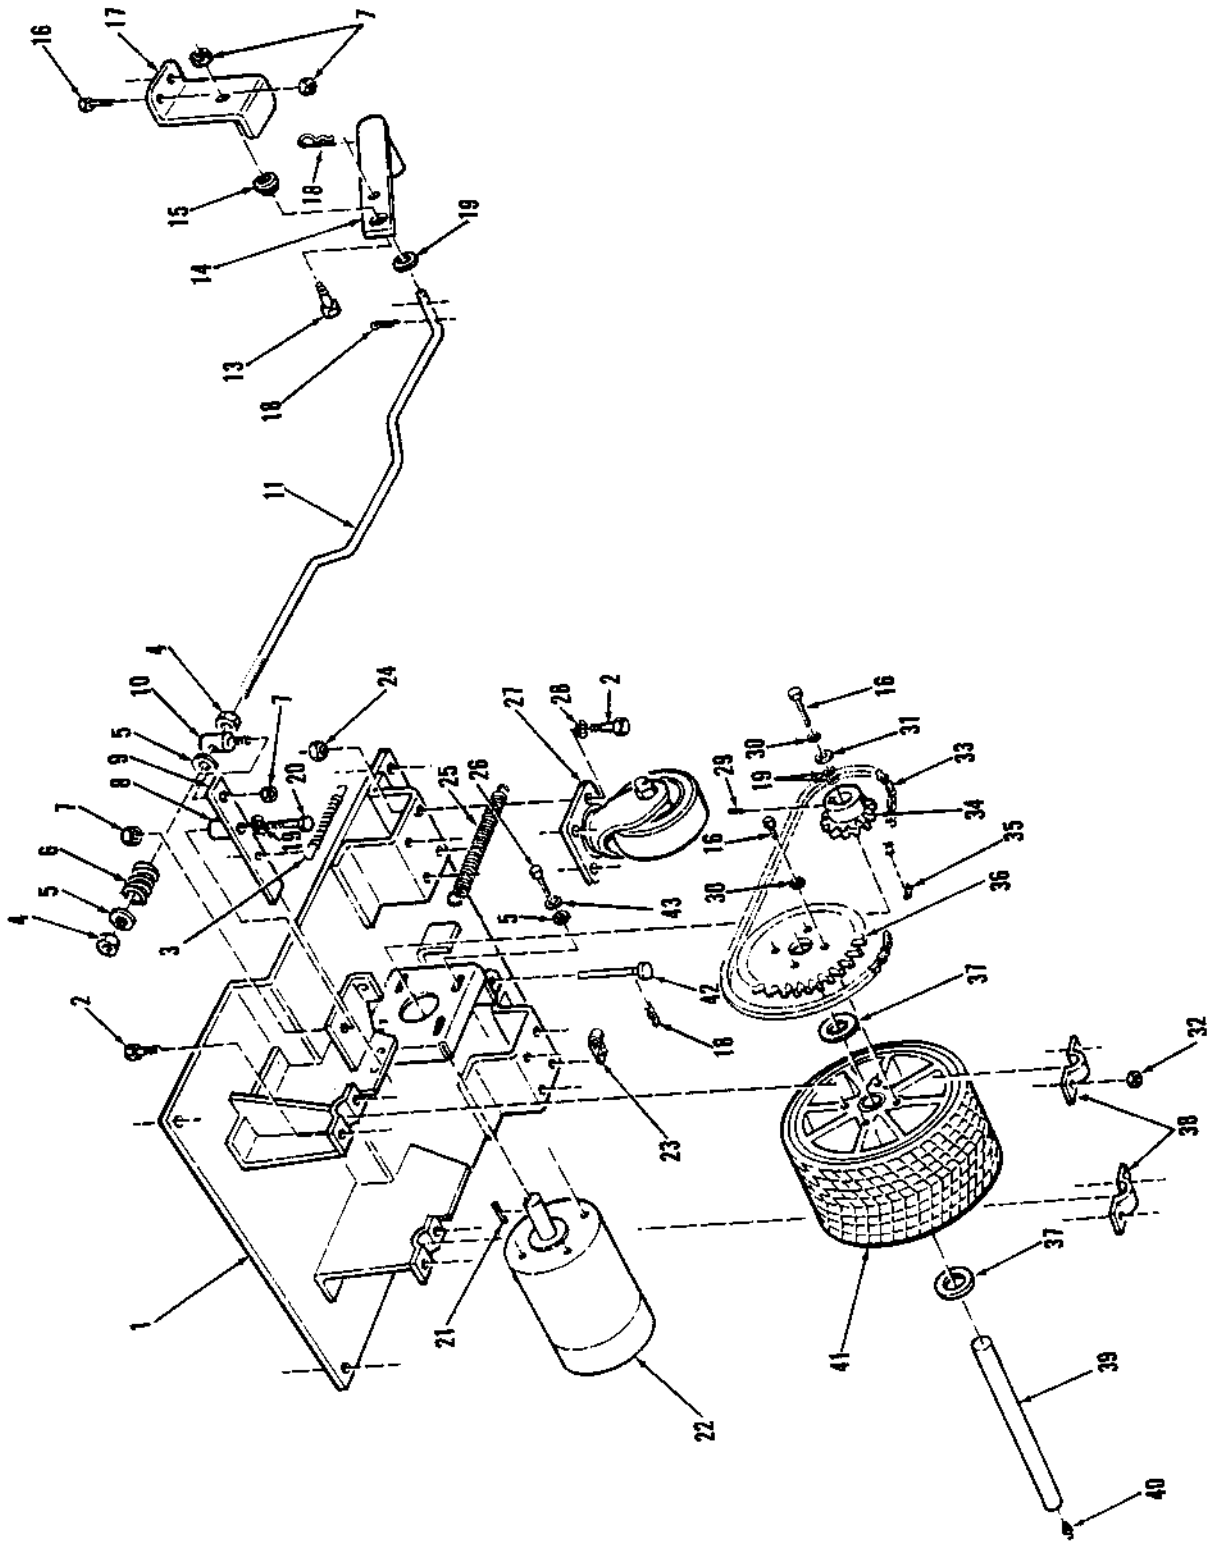

**Clarke Vision 38I/32IX/32I/ 26IX/26I  
Traverse System Assembly Parts List 11/93**

Ref #	Part No.	Description	Qty	38I	32IX	32I	26IX	26I
1	66690A	Traverse Plate	1	X	X	X	X	X
2	85727A	Screw, 3/8-16 x 1 Hex	12	X	X	X	X	X
3	848302	Brake Spring	1	X	X	X	X	X
4	81104A	Nut, 1/4-20 Hex ESNA	4	X	X	X	X	X
5	87026A	Washer, Flat 1/4	5	X	X	X	X	X
6	438360	Spring	1	X	X	X	X	X
7	920110	Nut, 5/16-18, ESNA	3	X	X	X	X	X
8	838214	Brake Arm Spacer	1	X	X	X	X	X
9	60412A	Brake Arm	1	X	X	X	X	X
10	848508	Brake Rod Swivel	1	X	X	X	X	X
11	67131A	Brake Rod	1	X	X	X	X	X
12	925004	Cotter Pin	1	X	X	X	X	X
13	85814A	Screw, 5/16-18 x 1.25 Hx	1	X	X	X	X	X
14	16703A	Brake Lever	1	X	X	X	X	X
15	67877A	Brake Pedal Spacer	1	X	X	X	X	X
16	85811A	Screw, 5/16-18 x 3/4 Hex	5	X	X	X	X	X
17	60663A	Brake Pedal Bracket	1	X	X	X	X	X
18	836711	Hairpin	3	X	X	X	X	X
19	980651	Washer, Flat 5/16	3	X	X	X	X	X
20	85816A	Screw, 5/16-18 x 1.5 Hx	1	X	X	X	X	X
21	915102	Key	1	X	X	X	X	X
22	835209	Traverse Motor	1	X	X	X	X	X
23	51828A	Strap	1	X	X	X	X	X
24	81105A	Nut, 3/8-16 ESNA	12	X	X	X	X	X
25	56495A	Spring, Centering	1	X		X		
26	170915	Screw, 1/4-20 x 3/4	4	X	X	X	X	X
27	899769	Caster Assembly	2	X	X	X	X	X
28	980638	Washer, Lock 3/8	8	X	X	X	X	X
29	962593	Screw, 1/4-20 x 3/8 set	2	X	X	X	X	X
30	980652	Washer, Lock 5/16	5	X	X	X	X	X
31	980205	Washer	1	X	X	X	X	X
32	82505A	Squeegee Actuator Pin	1	X	X	X	X	X
33	52202A	Chain	1	X	X	X	X	X
34	898550	Drive Sprocket	1	X	X	X	X	X
35	895158	Master Link	1	X	X	X	X	X
36	838506	Drive Sprocket	1	X	X	X	X	X
37	980475	Spacer Washer	4	X	X	X	X	X
38	69009A	Axle Strap	2	X	X	X	X	X
39	60154A	Shaft	1	X	X	X	X	X
40	883351	Grease Fitting	1	X	X	X	X	X
41	59944R	Wheel Assembly	1	X	X	X	X	X
42	66531A	Swing Arm Pin	1	X	X	X	X	X
43	170892	Washer, Lock 1/4	4	X	X	X	X	X

Clarke Vision 38 I - 32 I - 26 I  
Squeegee & Squeegee Arm Assembly Drawing 11/93


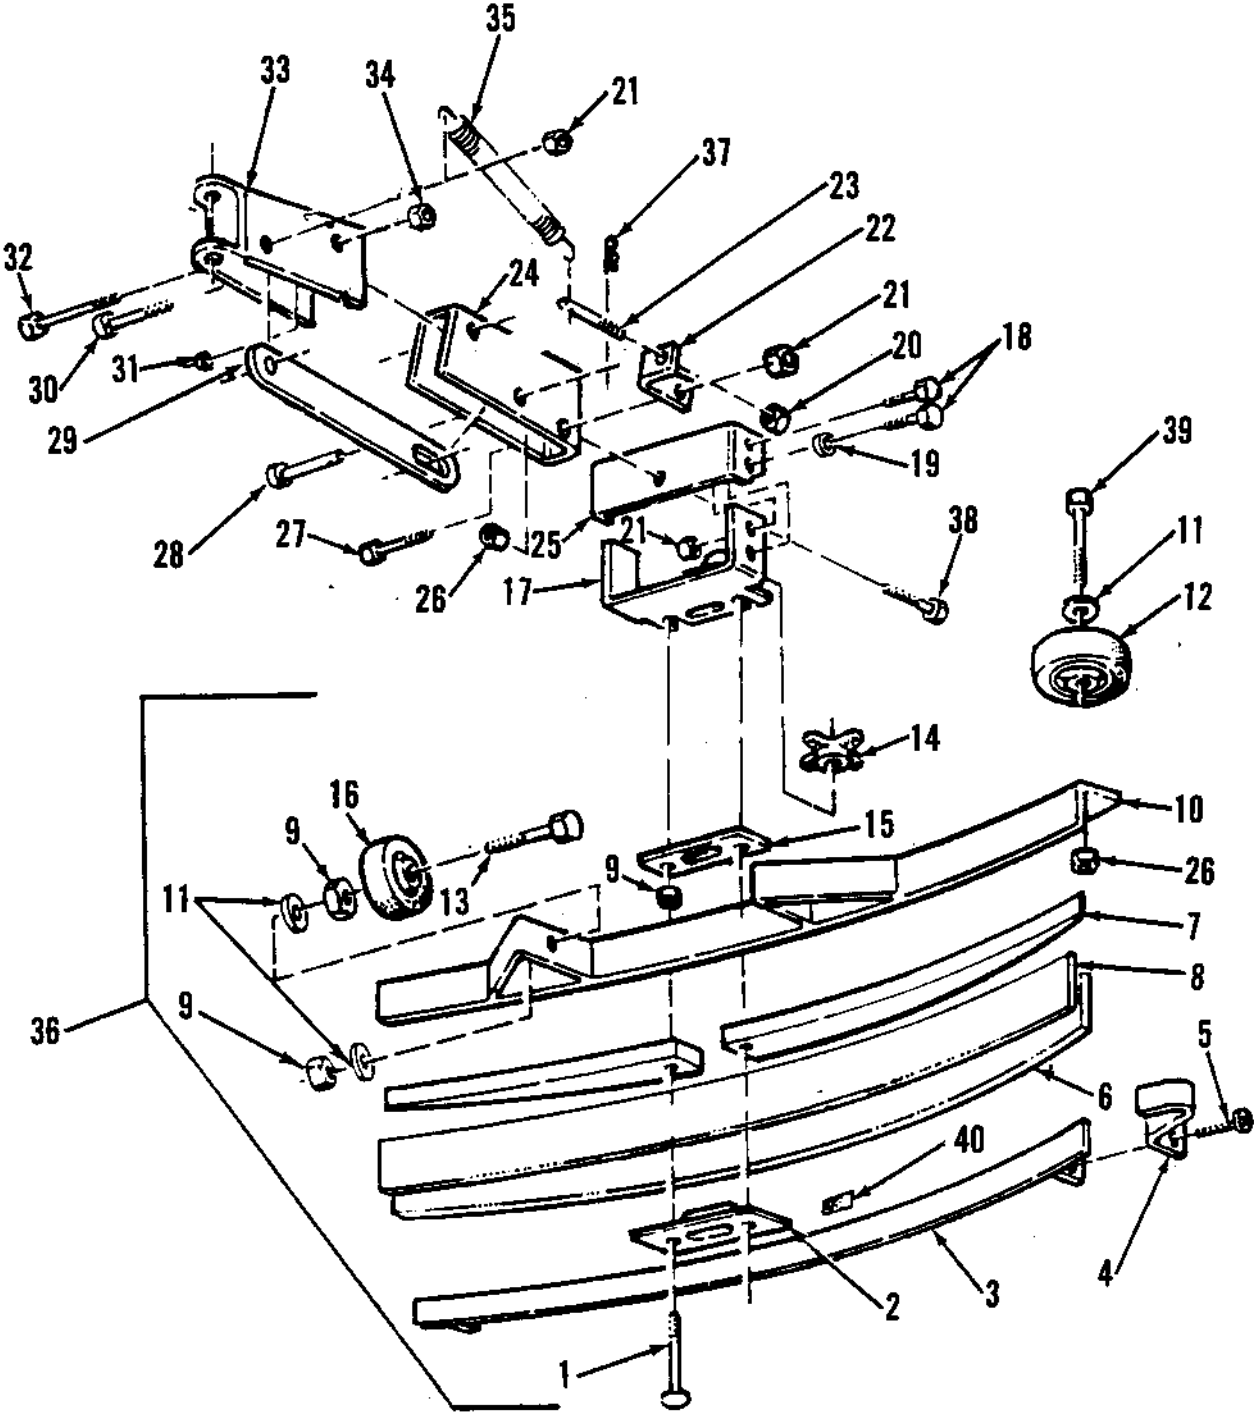


Clarke Vision 38 I - 32 I - 26 I  
Squeegee & Squeegee Arm Assembly Parts List 3/94

Ref #	Part No.	Description	Qty	88	89	90	91
1	80011A	Screw, 3/8-16 x 3 CR	2	x	x	x	
2	62712A	Duct	1	x	x	x	
3	62420A	Clamp Weld	1	x	x		
	62419A	Clamp Weld	1			x	
	62424A	Clamp Weld, 29" Acc.	1			x	
	62425A	Clamp Weldment	1	x			
4	62421A	End Clamp	2	x	x	x	
5	962989	Screw, 1/4-20 x 1 1/4 PN	2	x	x	x	
6	30913A	Outer Blade	1		x		
	30912A	Outer Blade	1			x	
	30931A	Outer Blade, 29" Acc.	1			x	
	30935A	Outer Blade	1	x			
7	38711A	Spacer	2		x		
	38710A	Spacer	2			x	
	38713A	Spacer, 29" Acc.	2			x	
	38715A	Spacer	2	x			
8	30915A	Inner Blade	1		x		
	30914A	Inner Blade	1			x	
	30930A	Inner Blade, 29" Acc.	1			x	
	30934A		1	x			
9	81301A	Nut, 3/8-16 JAM	10	x			
10	69024A	Squeegee Weld.	1		x		
	69023A	Squeegee Weld.	1			x	
	69059A	Sq. Weld., 29" Acc.	1			x	
	69067A	Squeegee Weldment	1	x			
11	980687	Washer 3/8 ID	9	x	x	x	
12	59950A	Guide Wheel	2	x	x	x	
13	85724A	Screw, 3/8-16 x 1.75 Hex	2	x	x	x	
14	25201A	Knob	2	x	x	x	
15	34260B	Squeegee Gasket	1	x	x	x	

Ref #	Part No.	Description	Qty	88	89	90	91
16	419702	Wheel	2	x	x	x	
17	61242A	Tube Bracket	1	x	x	x	
18	170915	Screw, 1/4-20 x 3/4 Hex	4	x	x	x	
19	87026A	Washer, Flat 1/4	5	x	x	x	
20	920256	Nut, 5/16-18 Hex	2	x	x	x	
21	81104A	Nut, 1/4-20 Hex ESNA	1	x	x	x	
22	60659A	Squeegee Spring Brkt.	2	x	x	x	
23	68013A	Squeegee Adj. Stud	2	x	x	x	
24	60417A	Arm, Wldmt, Rear	1	x	x	x	
25	61249A	Pin Bracket	1	x	x	x	
26	81105A	Nut, 3/8-16 ESNA	3	x	x	x	
27	962269	Screw, 1/4-20 x 2.50 Hex	1	x	x	x	
28	82505A	Squeegee Actuator Pin	1	x	x	x	
29	63009A	Squeegee Lift Bar	1	x	x	x	
30	80015A	Shoulder Bolt	1	x	x	x	
31	920056	Nut, 6-32 ESNA	4	x	x	x	
32	962920	Screw, 1/4-20 x 3.4 Soc.	1	x	x	x	
33	60420A	Front Arm	1	x	x	x	
34	920110	Nut, 5/16-18 ESNA	3	x	x	x	
35	56493A	Squeegee Press. Spring	2	x	x	x	
36	18806A	Squeegee Asm.	1		x		
	18805A	Squeegee Asm.	1			x	
	18807A	Squeegee Asm, 29" Acc	1			x	
	18808A	Squeegee Asm.	1	x			
37	836711	Hairpin	3	x	x	x	
38	85727A	Screw, 3/8-16 x 1 Hwx	1	x	x	x	
39	85704A	Screw, 3/8-16 x 2 1/4	2	x	x	x	
40	37016A	Pad	1	x	x	x	

Clarke Vision 38 I - 32 I - 26 I/IX  
 Brush Head Assembly Parts List 3/94

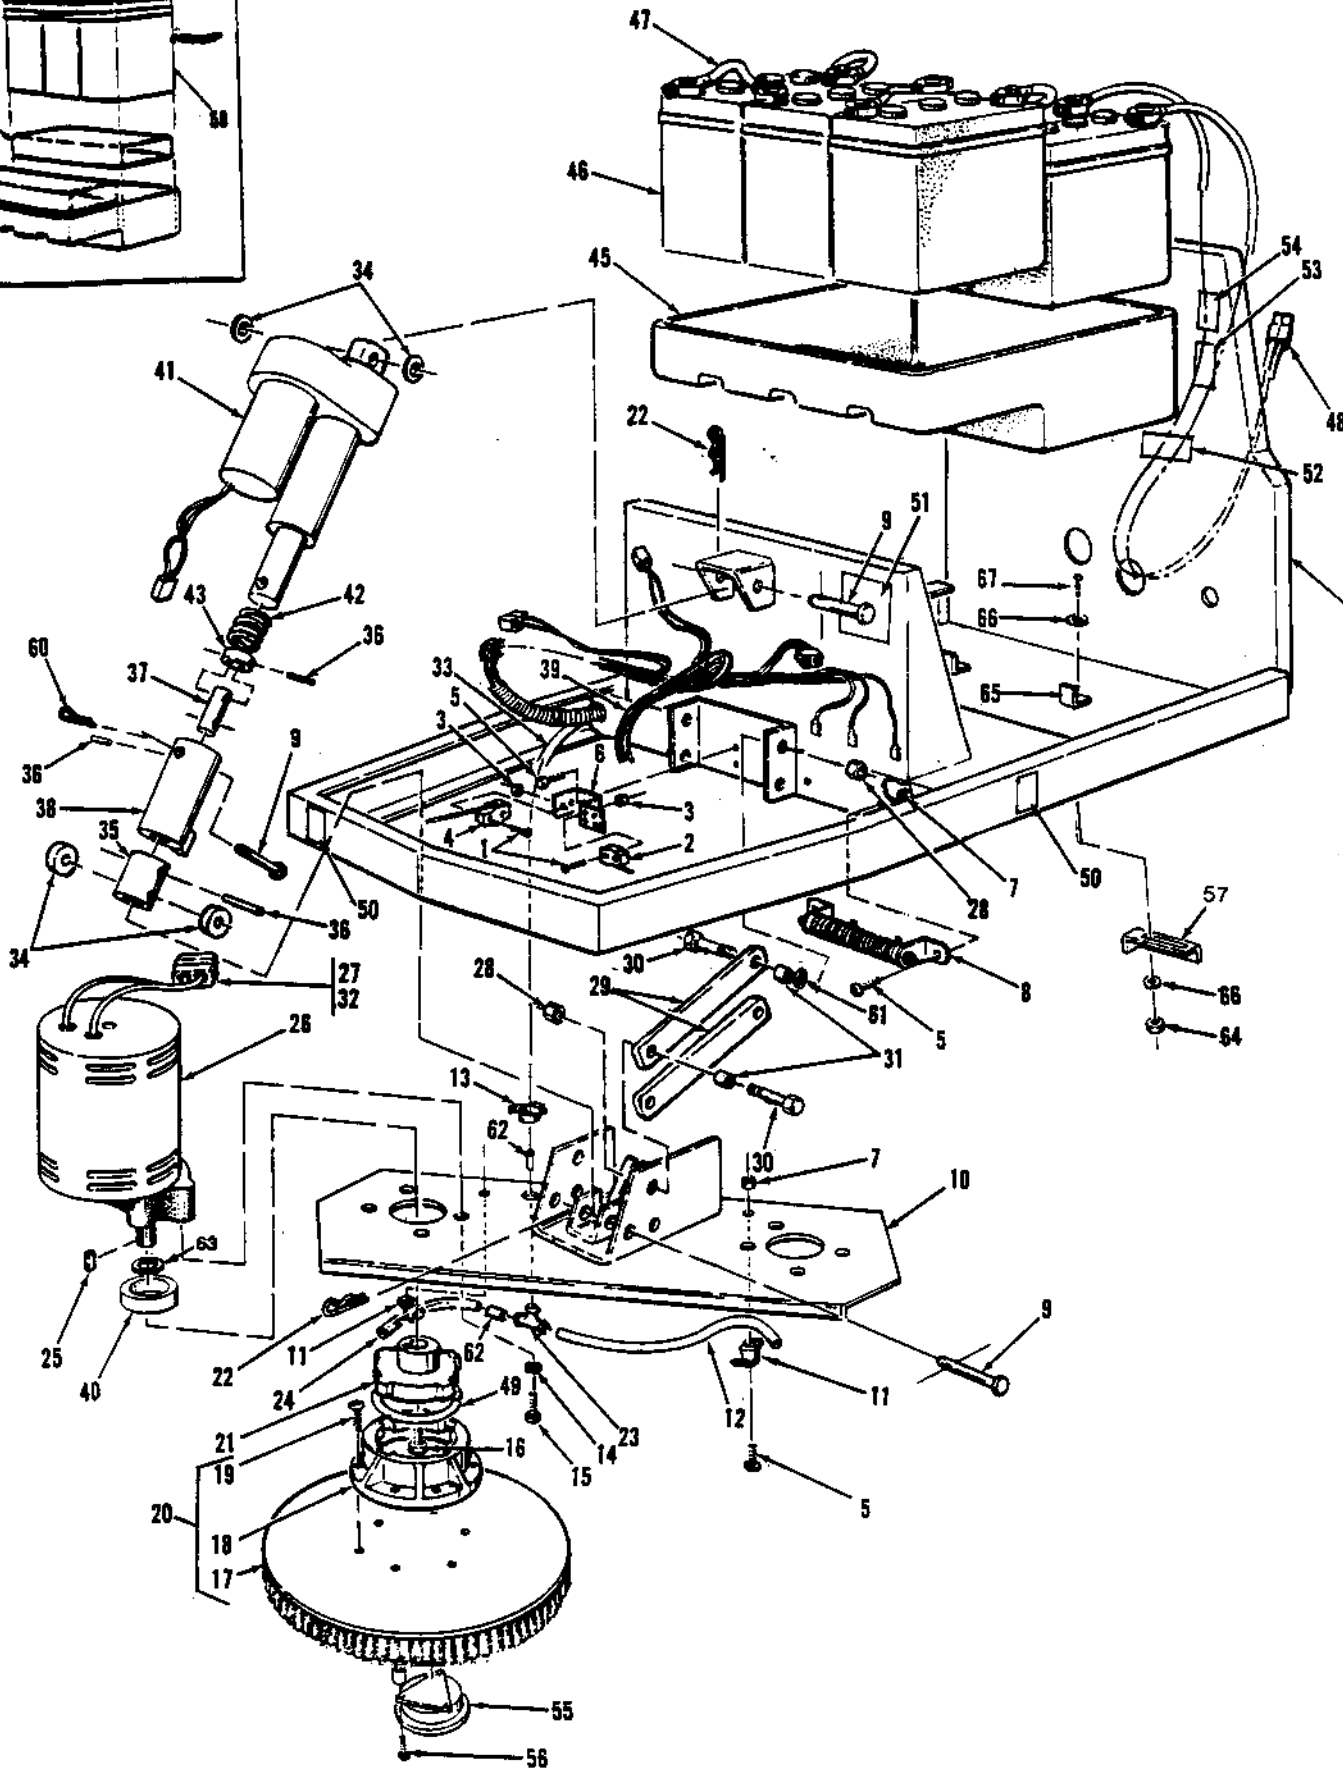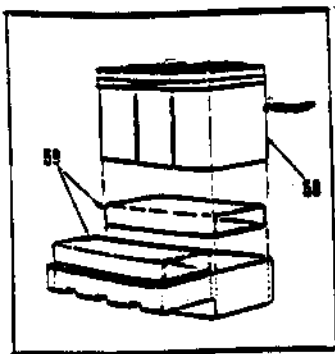

**Clarke Vision 38 I - 32 I - 26 I/IX**  
**Brush Head Assembly Parts List 3/94**


Ref #	Part No.	Description	Qty	X			
				38	32	26	26
1	962980	Screw, 6-32 x 1 PN	4	x	x	x	x
2	47374A	Lever Switch	1	x	x	x	
	47374A	Lever Switch	2				x
3	920056	Nut, 6-32 ESNA	6	x	x	x	x
4	47389A	Switch, Asm Brush	1	x	x	x	x
5	85391A	Screw, 1/4-20 x 5/8 PN	4	x	x	x	
6	60683A	Switch Bracket	1	x	x		
	60695A	Switch Bracket	1			x	x
7	81104A	Nut, 1/4-20 ESNA	2	x	x	x	
8	46507A	Resistor	1	x	x		
	912300	Resistor	1			x	
9	82501A	Pin	3	x	x	x	x
10	68631A	Brush Plate	1	x			
	68618A	Brush Plate	1			x	x
	68653A	Brush Plate	1	x			
11	782002	Clamp	2	x	x	x	x
12	35195A	Brush Hose L.H.	1	x			
	30411A	Brush Hose L.H.	1			x	x
	30417A	Brush Hose L.H.	1	x			
13	722030	Hose Clamp	1	x	x	x	x
14	980638	Washer, Lock 3/8	8	x	x	x	
	980652	Washer, Lock 5/16	8			x	
15	962244	Screw, 3/8-16 x 3/4 Hx	8	x	x	x	
	85811A	Screw, 5/16-18 x 3/4 Hx	8			x	
16	962714	Screw, 5/16-18 x 3/4 Soc	2	x	x	x	x
17	51461A	Poly Brush - 17"	2	x			
	51462A	Grit Brush - 17"	2	x			
	53135B	Pad Driver - 17"	2	x			
	51459A	Poly Brush - 14"	2			x	x
	51460A	Grit Brush - 14"	2			x	x
	53134B	Pad Driver - 14"	2			x	x
	51478A	Poly Brush - 19"	2	x			
	51477A	Grit Brush - 19"	2	x			
	53143B	Pad Driver - 19"	2	x			
18	833802	Gimbal	2	x	x	x	x
19	962495	Screw, 1/4-20 x 1 Pn	6	x	x	x	x
20	11424A	Poly Brush Asm. 17"	2	x			
	11425A	Grit Brush Asm. 17"	2	x			
	17520C	Pad Driver Asm. 17"	2	x			
	11427A	Poly Brush Asm. 14"	2			x	x
	11426A	Grit Brush Asm. 14"	2			x	x
	17521C	Pad Driver Asm. 14"	2			x	x
	11434A	Poly Brush Asm. - 19"	2	x			
	11433A	Grit Brush Asm - 19"	2	x			
	17524B	Pad Driver Asm - 19"	2	x			
21	34400B	Gimbal	2	x	x	x	x
22	836711	Hairpin	3	x	x	x	x
23	59011A	Tee	1	x	x	x	x
24	35196A	Brush Hose R.H.	1			x	x
	30418A	Brush Hose, R.H.	1	x			
25	915102	Key	1	x	x	x	x
26	45033A	Brush Motor	2		x	x	
	45036A	Brush Motor	2	x			
	835207	Brush Motor	2			x	
27	41601A	Connector	2	x	x	x	x

Ref #	Part No.	Description	Qty	X			
				38	32	26	26
28	920365	Nut, 1/2-13 ESNA	8	x	x	x	x
29	63008A	Linkage Bar	4		x	x	x
	63032A	Linkage Bar	4	x			
30	962344	Screw, 1/2-13 x 1 1/4 HX	8	x	x	x	x
31	67705B	Sleeve Bearing	8	x	x	x	x
32	41602A	Connector Housing	2	x	x	x	x
33	35199A	Solution Hose	1	x	x	x	x
34	38708A	Nylon Washer	4	x	x	x	x
35	67703A	Head Pressure Sleeve	1	x	x	x	x
36	82404A	Spirol Pin, 3/16	3	x	x	x	x
37	66530A	Head Pressure Pin	1			x	x
	66541A	Head Pressure Pin	1	x			
38	69100B	Head Pressure Tube	1			x	x
	69126A	Head Pressure Tube	1	x			
39	49698C	Main Harness	1			x	
	49699C	Main Harness	1	x	x	x	
40	61658A	Gimbal Collar	2	x	x	x	
41	50202A	Actuator	1	x	x	x	x
42	53402A	Head Pressure Spring	1	x	x		
	53400A	Head Pressure Spring	1			x	
	53401A	Head Pressure Spring	1			x	
43	69006A	Spring Seat	1	x	x	x	x
44	63340A	Main Frame	1	x	x		
	63336A	Main Frame				x	x
45	39006A	Battery Tray	1	x	x	x	x
46	87133A	Battery, 12 Volt, 195 AH	3	x	x	x	x
	881317	Battery, 6 Volt, 250 AH	6	x	x	x	x
	891384	Battery, 6 Volt, 330 AH	6	x	x	x	x
	40702A	Battery, 6 Volt, 370 AH	6	x	x	x	x
47	842406	Series Cable-9"	3	x	x	x	x
	41206A	Series Cable-16"	2	x	x	x	x
48	41208A	Battery Cable	1	x	x	x	x
49	838301	Brush Holder Spring	2	x	x	x	x
50	77091A	Label, Warning-Moving	3	x	x	x	x
51	77099A	Label, Wiring	1	x	x	x	
	77097A	Label, Wiring	1				x
52	77098B	Label, Battery	1	x	x	x	x
53	77092A	Label, Warning-Battery	2	x	x	x	x
54	77093A	Label, Warning-Falling	2	x	x	x	x
55	884015	Holder Asm., (pad driver only)	2	x	x	x	x
56	85600A	Screw #10-18x3/8 (pad driver only)	6	x	x	x	x
57	68113A	Swing Arm Stop	1	x	x	x	x
58	87133A	Battery, 12 Volt, 195 AH	3	x	x	x	
59	67881A	Spacer, 12 Volt Battery	2	x	x	x	
60	925006	Cotter Pin	1	x	x	x	x
61	980673*	Washer 1/2 I.D. x 7/8 x 3/64	8	x	x	x	
62	35604A	Insert, Solution	2	x	x	x	x
63	59856A	Washer, Rubber	2	x	x	x	x
64	920181	Nut, 5/16 - 18 ESNA	2	x	x	x	x
65	60659A	Bracket	2	x	x	x	x
66	990205	Washer	3	x	x	x	x
67	85814A	Screw, 5/16 - 18 x 1 1/4 Hx	2	x	x	x	x

**NOTE: \* #61 used on 32 & 38 only as needed to square-up linkage bars (item 29)**




Clarke Vislon 38 I/ 32I/IX - 26 I/IX  
Solution/Vacuum System Drawing 11/93

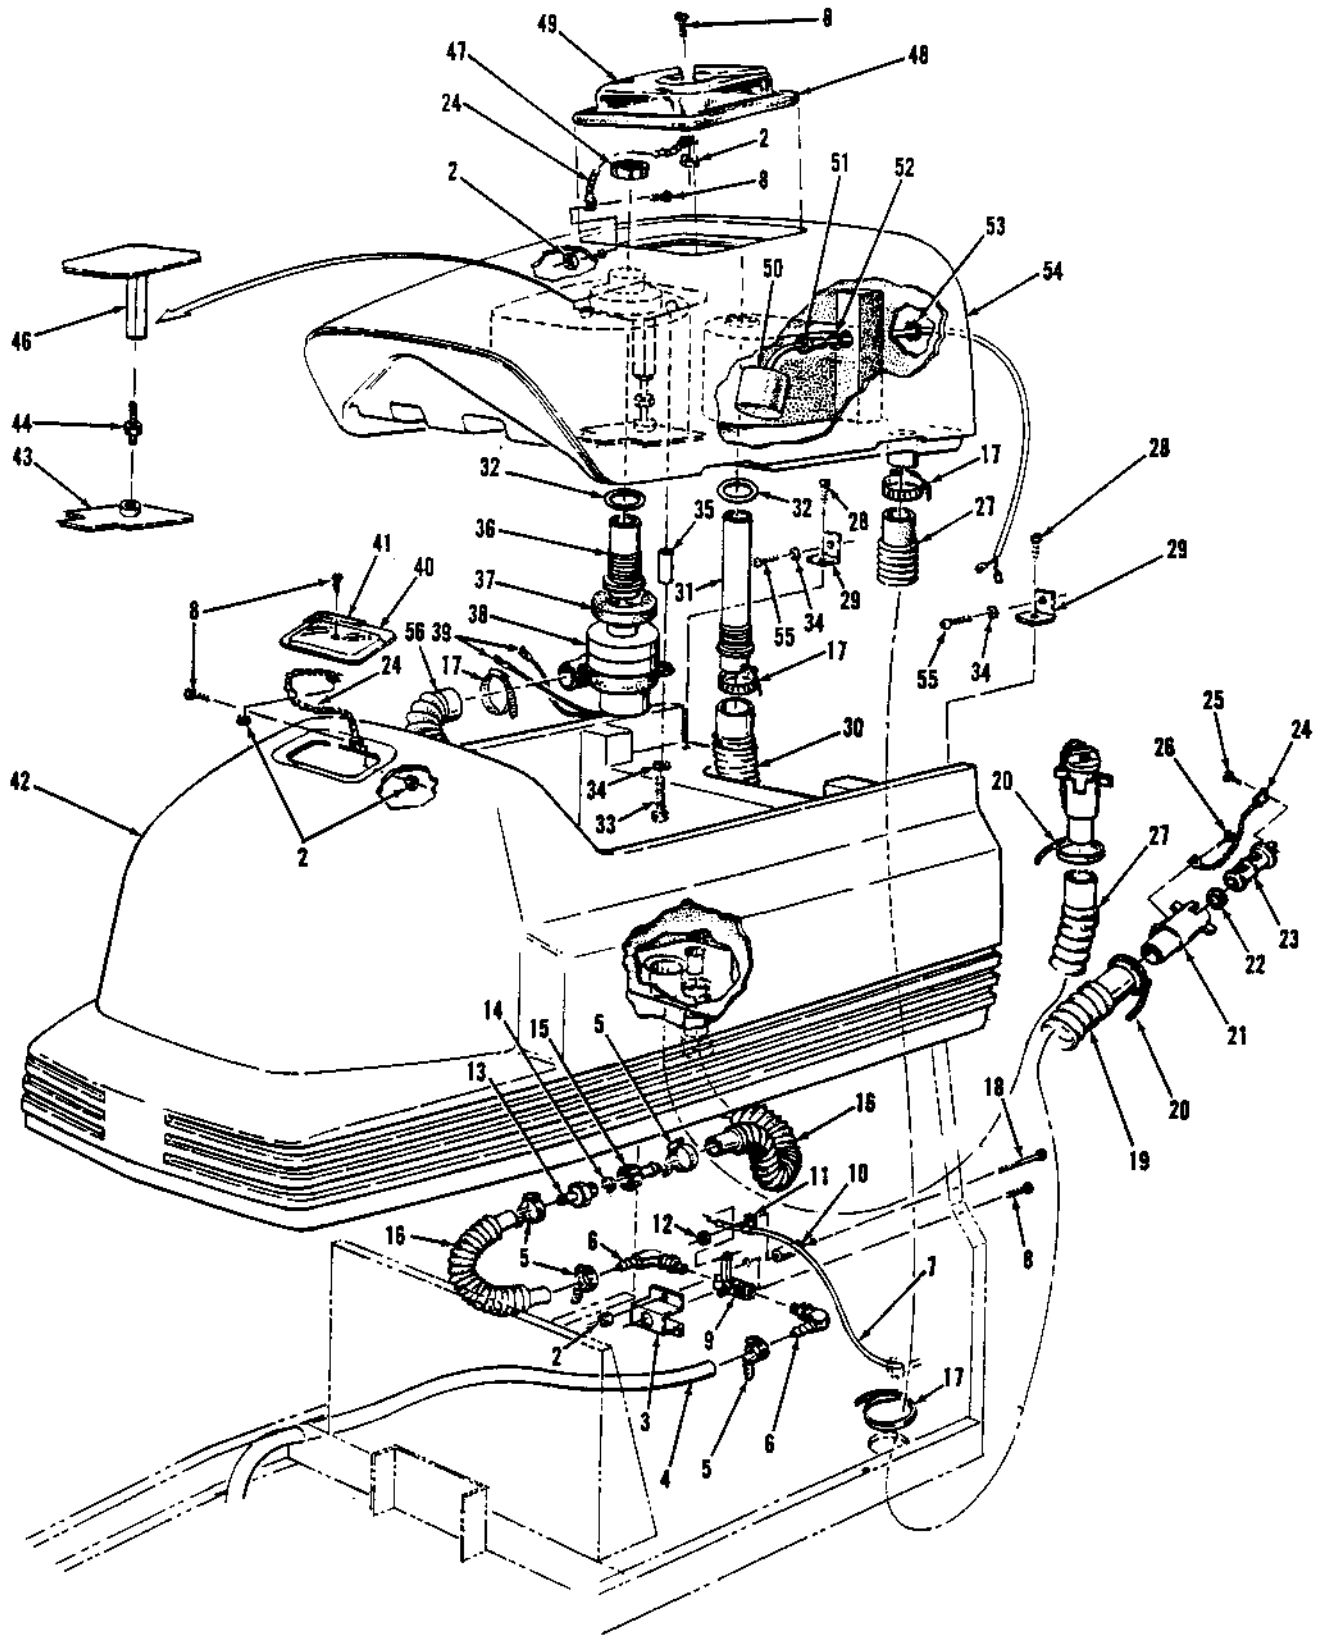




Clarke Vision 38 I/ 32 I/IX - 26 I/IX  
Brush Housing Assembly Drawing 11/93

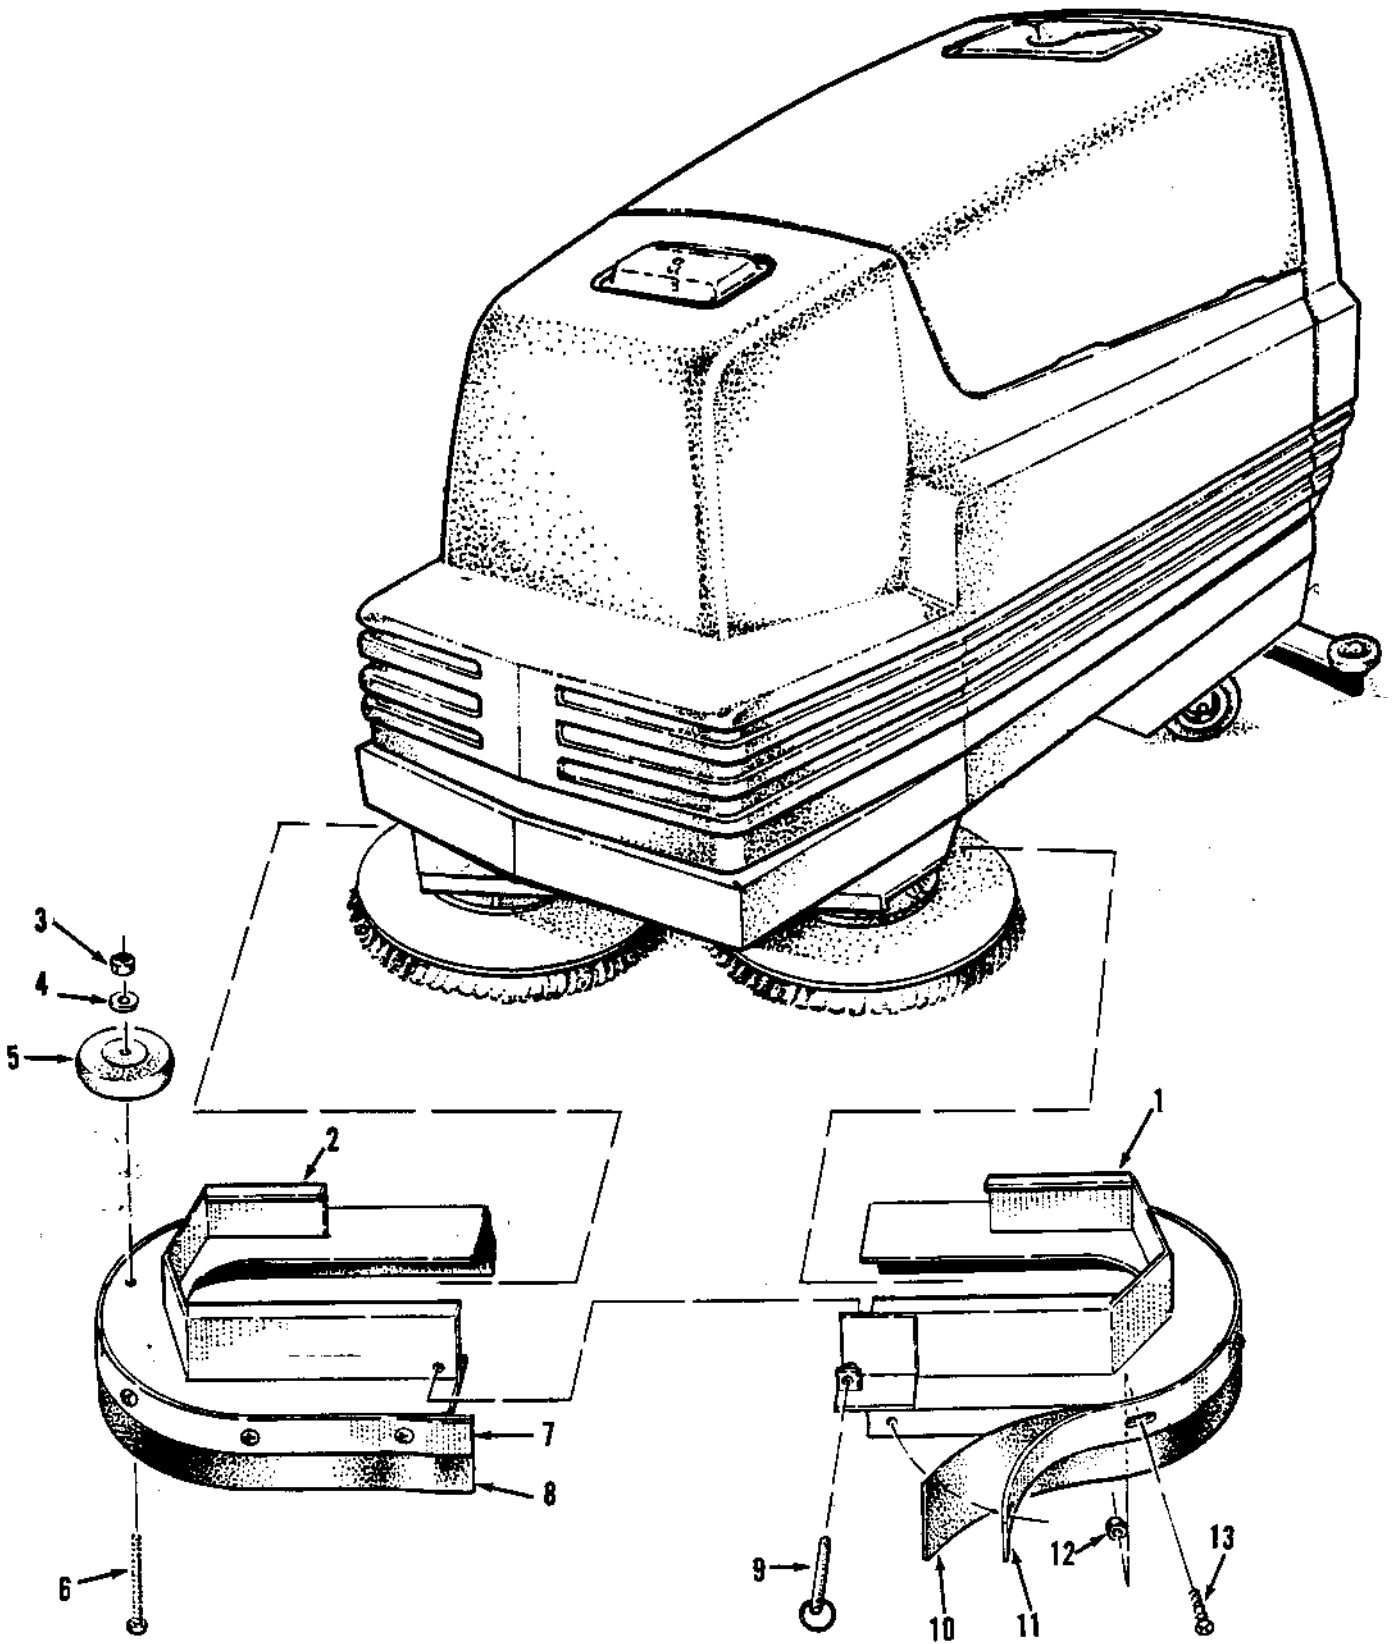

**Clarke Vision 38 I/ 32 I/IX - 26 I/IX**  
**Brush Housing Assembly Parts List 11/93**


Ref #	Part No.	Description	Qty	38	32	IX	26	IX
1	64718A	Brush Housing, L.H.	1	x				
	64717A	Brush Housing, L.H.	1		x			
	64715A	Brush Housing, L.H.	1			x x		
	64724A	Brush Housing, L.H.	1	x				
2	64719A	Brush Housing, R.H.	1	x				
	64720A	Brush Housing, R.H.	1		x			
	64716A	Brush Housing, R.H.	1			x x		
	64725A	Brush Housing, R.H.	1	x				
3	81105A	Nut, 3/8-16 ESNA	1	x	x	x	x	x
4	980687	Washer	1	x	x	x	x	x
5	59950A	Guide, Wheel	1	x	x	x	x	x
6	85704A	Scr., 3/8-16 x 2 1/4	1	x	x	x	x	x
7	69038A	Strap, R.H.	1		x	x		
	69034A	Strap, R.H.	1				x	x
	69066A	Strap, R.H.	1	x				
8	38224A	Skirt, R.H.	1		x	x		
	38223A	Skirt, R.H.	1				x	x
	38229A	Skirt, R.H.	1	x				
9	50449A	Pin	1	x	x	x	x	x
10	38225A	Skirt, L.H.	1		x	x		
	38222A	Skirt, L.H.	1				x	x
11	38230A	Skirt, L.H.	1	x				
	69037A	Strap, L.H.	1		x	x		
	69033A	Strap, L.H.	1				x	x
	69065A	Strap, L.H.	1	x				
12	81104A	Nut, 1/4-20 ESNA	13		x	x		
	81104A	Nut, 1/4-20 ESNA	11				x	x
13	81104A	Nut, 1/4-20 ESNA	14	x				
	962983	Scr., 1/4-20 x 5/8 PN	13		x	x		
	962983	Scr., 1/4-20 x 5/8 PN	11				x	x
	962983	Scr., 1/4-20 x 5/8 PN	14	x				

**Clarke Vision 38I / 32I / 26IX**  
**Brush Motor #45033A (32 I & 26 IX) / 45036A (38 I) 11/93**

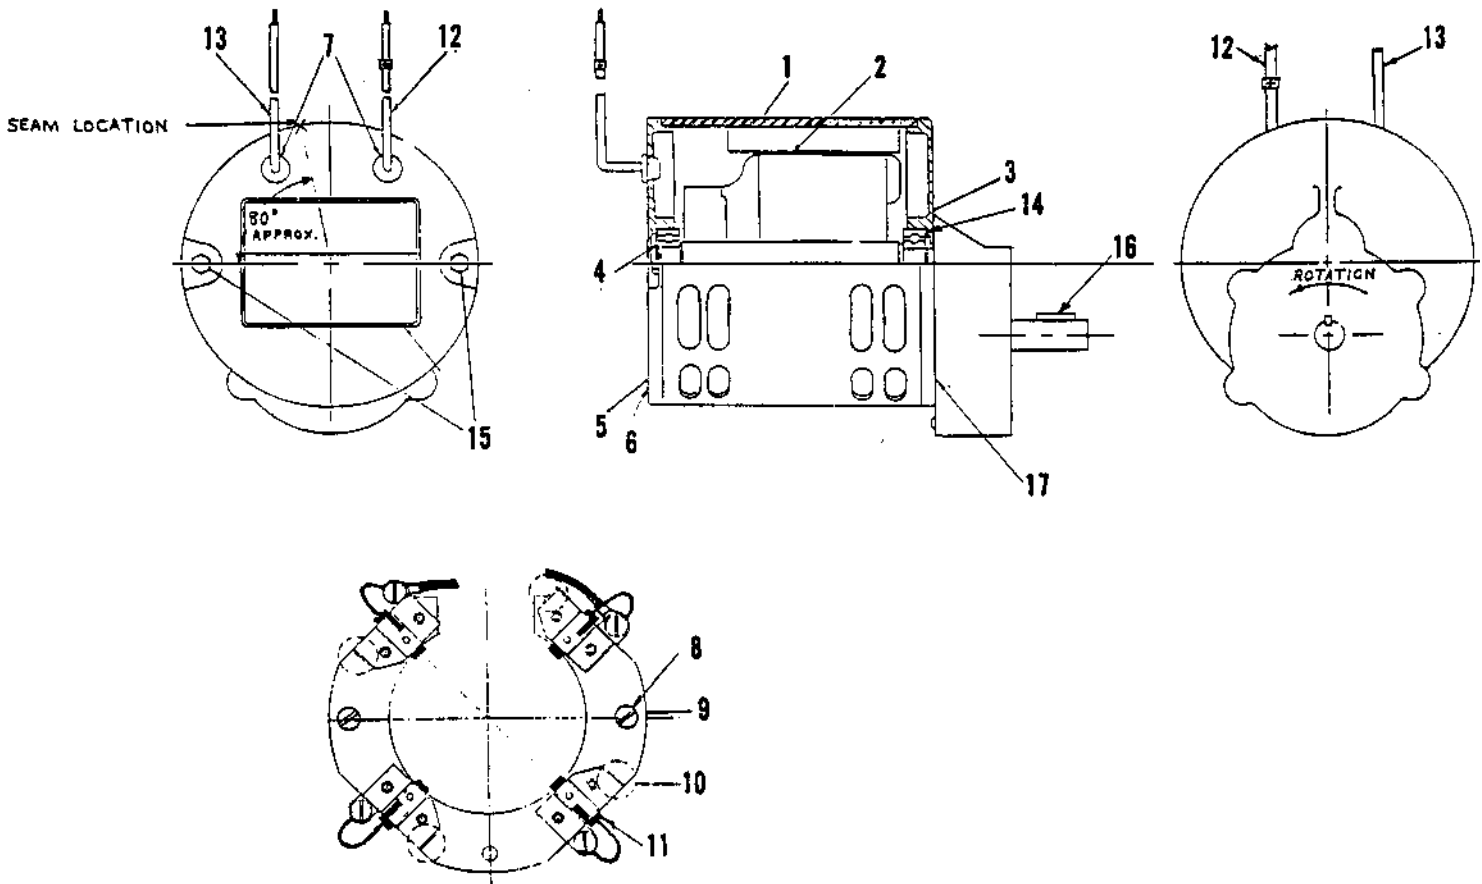


Ref #	Part No.	Description	Qty	38I 32I 26I		
				38I	32I	26I
1	56478A	Stator Assembly (w/Magnets & Clips)	1	x	x	
	46734A	Stator Assembly (w/Magnets & Clips)	1	x		
2	40312A	Armature Asm.(w/B.E. & F.E. bearings)	1	x	x	
	40318A	Armature Asm.(w/B.E. & F.E. bearings)	1	x		
3	902654	Bearings B.E.	1	x	x	x
4	902550	Bearing F.E.	1	x	x	x
5	51840A	Commutator Bracket Assembly (w/Brush BRD Assembly Leads)	1	x	x	x
6	50520A	Commutator Bracket	1	x	x	x
7	56480A	Strain Relief	2	x	x	x
8	962546	Brush Board Screw	2	x	x	x
9	50517A	Brush Board Asm. (w/springs & brushes)	1	x	x	x
10	448396	Brush Spring	4	x	x	x
11	40826A	Brush Assembly	4	x	x	x
12	55657A	Lead Assembly	1	x	x	x
13	55656A	Lead Assembly	1	x	x	x
14	59805A	Helical Washer	1	x	x	x
15	50515A	Thru Bolt	2	x	x	x
16	44809A	Shaft Key	1	x	x	x
17	54238A	B.E. Bracket Assembly (Gear Box)	1	x	x	x

Clarke Vision 38 I - 32 I - 26 IX  
 Gear Box #54238A 11/93

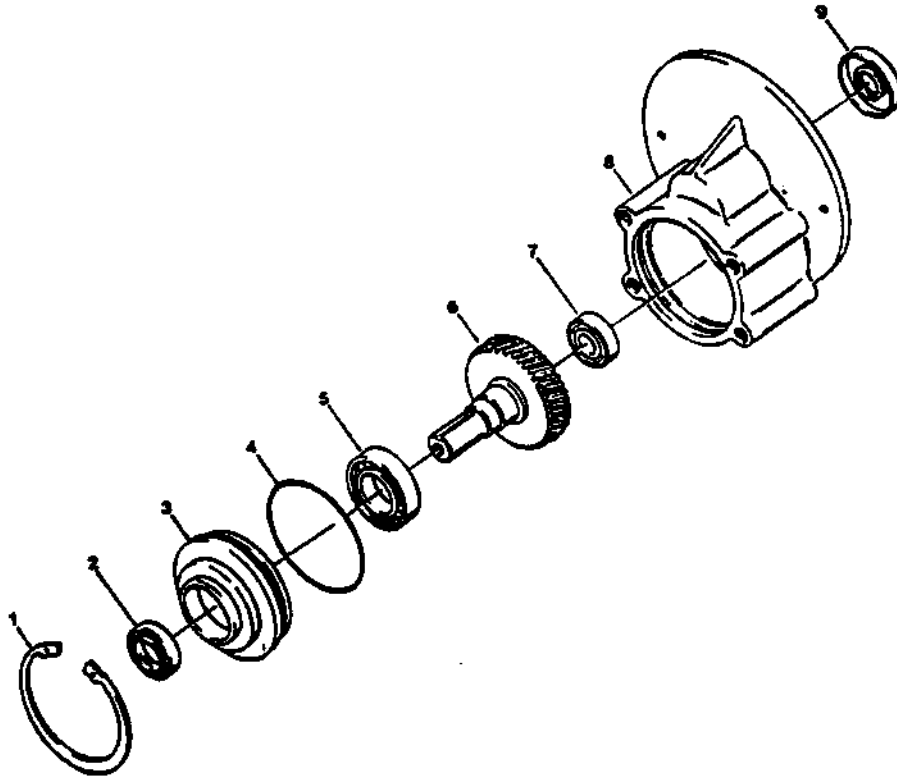

Ref #	Part No.	Description	Qty
1	57846A	Ring, Snap	1
2	58143A	Seal, Oil, Small	1
3	52050A	Cap End	1
4	56668A	O'Ring	1
5	51176A	Bearing, Large	1
6	58316A	Bearing, Large	1
7	902605	Bearing, Small	1
8	54883A	Housing	1
9	58144A	Seal, Oil Large	1
NI		Grease	1oz.


**Clarke Vision 38 I/ 32 I/IX & 26 I/IX  
Vac Motor Assembly #45019A 11/93**

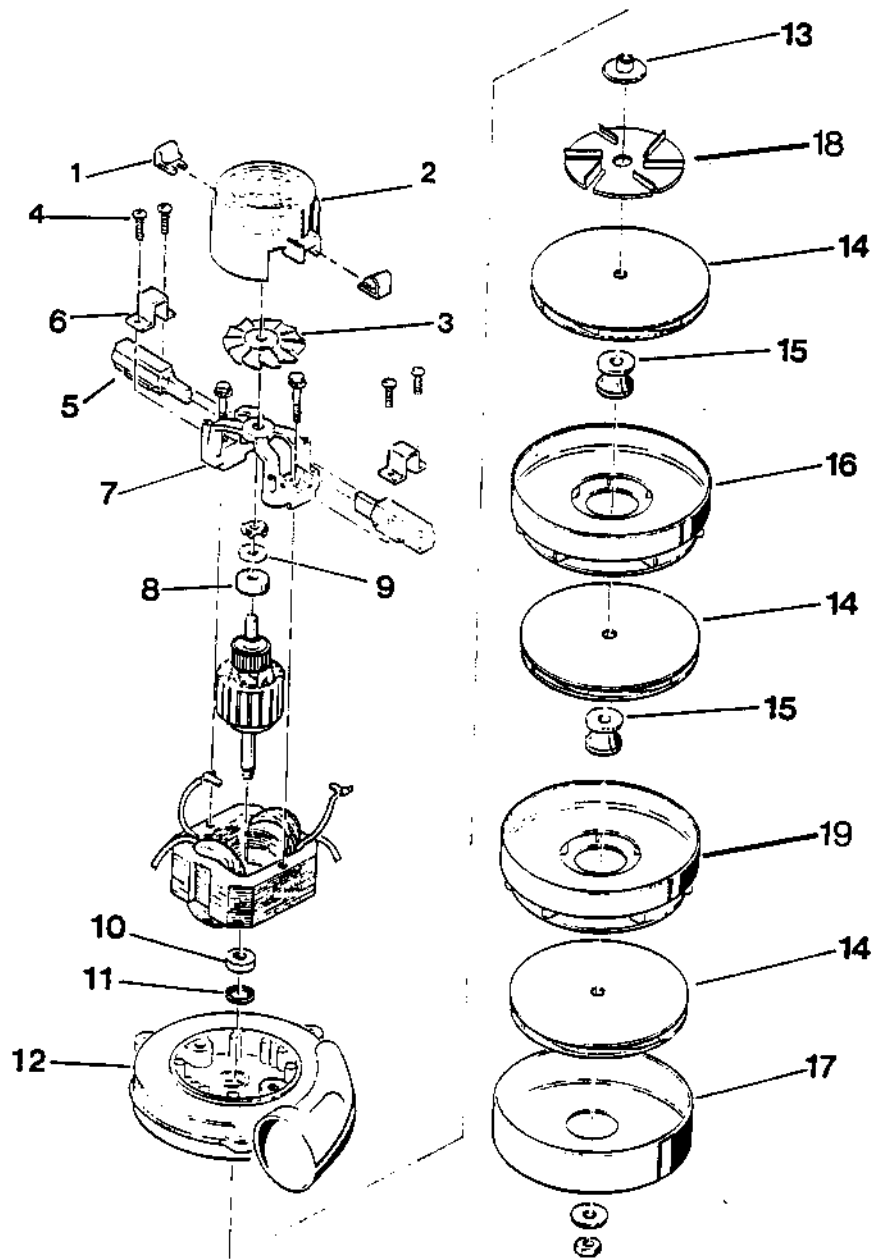

Ref #	Part No.	Description	Qty
1	51913A	Clip (optional)	2
2	54809A	Housing	1
3	53905A	Fan	1
4	85303A	Screw - 8-32 x 3/8	4
5	51419A	Carbon Brushes	2
6	51914A	Clamp	2
7	50618A	Bracket	1
8	53100A	Disc	1
9	902679	Bearing - Ball	1
10	902648	Bearing - ball, radial	1

Ref #	Part No.	Description	Qty
11	59803A	Washer - neoprene	1
12	50610A	Bracket and shell	1
13	58501A	Spacer	1
14	53914A	Fan - Rotating	3
15	658201	Spacer	2
16	53908A	Fan - Stationary	1
17	658506	Shell	1
18	53995A	Fan, Air Seal	1
19	53996A	Fan, Stationary	1


Clarke Vision 38 I/ 32 I/IX - 26 V/IX  
 Traverse Motor #835209 11/93

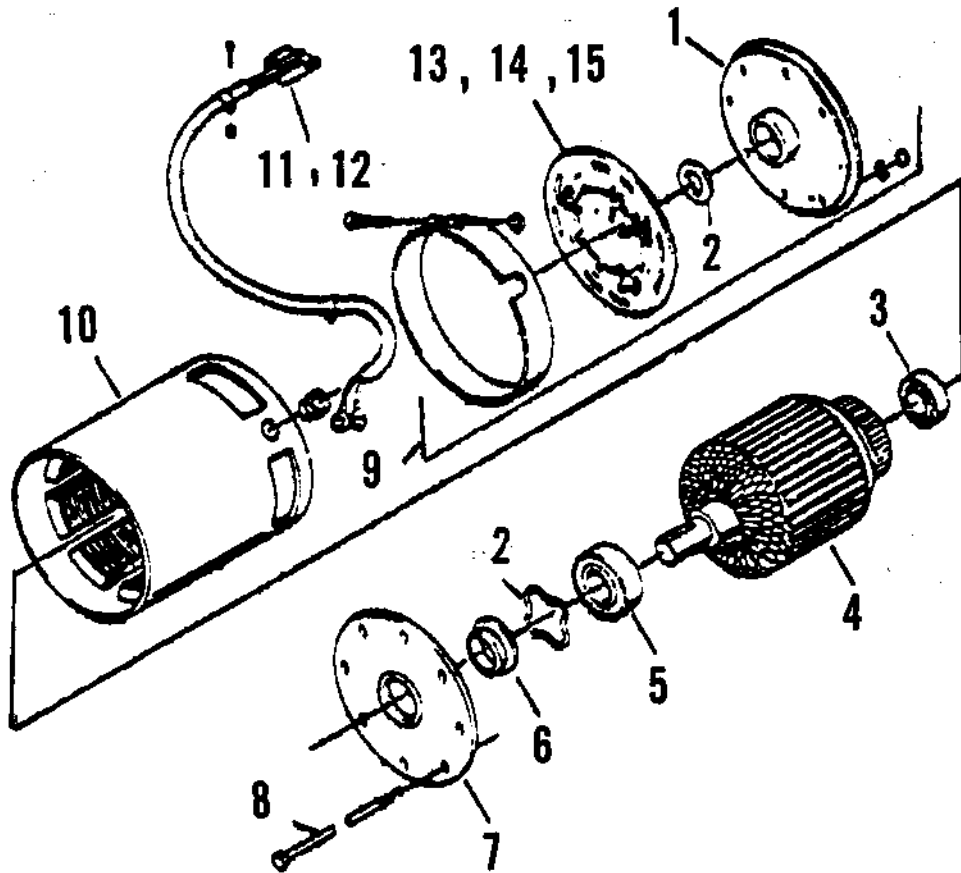

Ref #	Part No.	Description	Qty
1	830847	Bracket Commutator	1
2	980076	Washer - Helical	1
3	902547	Bearing	1
4	830402	Armature Assembly	1
5	902550	Bearing	1
6	897655	Seal - Oil	1
7	830845	Bracket	1
8	962955	Screw 1/4-20 x 6 Hex	2
9	830839	Bracket Assembly	1
10	833102	Field Asm. w/Mag Clips	1
11	912206	Housing - Male Terminal Connector	1
12	912207	Terminal - Male	1
13	831313	Brush Holding Assembly	4
14	448396	Spring -Brush	4
15	830941	Brush Assembly	1



**Clarke Vision 38 I/ 32 I/IX - 26 V/IX  
36 Volt Battery Charger 11/93**

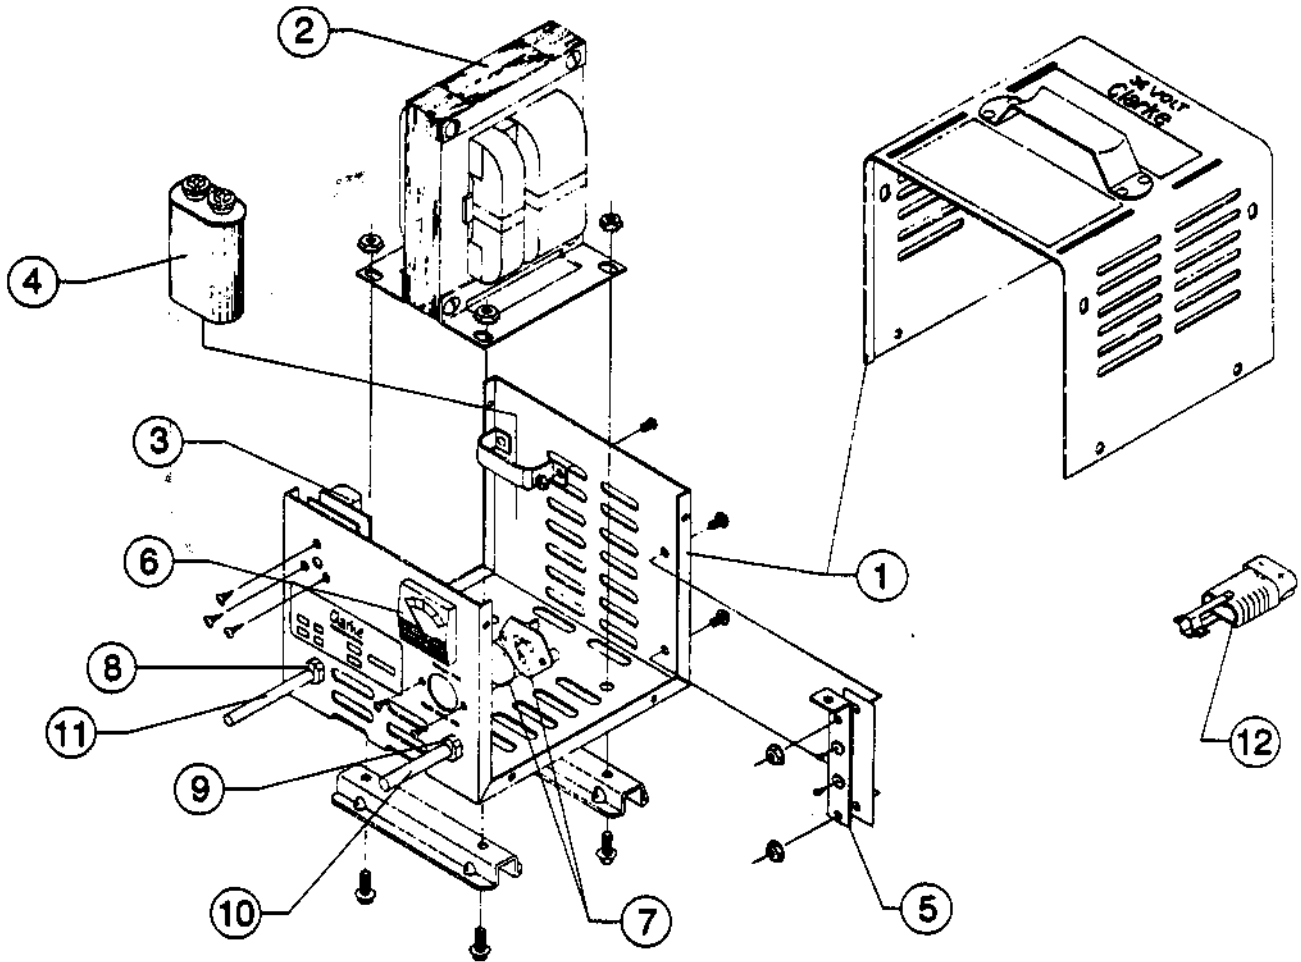

**WARNING: All electrical repairs must be performed by qualified personnel only.**

**PARTS LIST FOR BATTERY CHARGERS**

40506A - 36 Volt D.C., 25A, 115 Volt A.C., 60 Hz  
 40505A - 36 Volt D.C., 25A, 230 Volt A.C., 50 Hz  
 40507A - 36 Volt D.C., 25A, 230 Volt A.C., 60 Hz  
 40514A - 36 Volt D.C., 36A, 115 Volt A.C., 60 Hz  
 40515A - 36 Volt D.C., 36A, 230 Volt A.C., 50Hz

Ref #	Description	Charger Model Number				
		40506A Part #	40507A Part #	40505A Part #	40514A Part #	40515A Part #
1	Charger Case	42503A	42504A	51959A	41139A	51856A
2	Transformer	48400A	48412A	48401A	Ref	Ref
3	Electronic Timer Kit	41102A	41103A	41103A	41102A	41103A
4	Capacitor, 6 Mfd., 660 V.A.C.	912132	912132	912132	912132	912132
5	Heat Sink Assembly	912212	912212	912212	43301A	43301A
6	Ammeter	40200A	40200A	40200A	40210A	40210A
7	Fuse Assembly	912382	912382	912382	42704A	42704A
8	Strain Relief, A.C. Cord	837525	837525	837525	747553	747553
9	Strain Relief, D.C. Cord	747553	747553	747553	737502	737502
10	D.C. Cord Assembly	51973A	51973A	51973A	42303A	42303A
11	A.C. Cord Assembly	51974A	908947	908947	51974A	51857A
12	D.C. Plug	911185	911185	911185	911185	911185
	D.C. Plug Lock Key	795020	795020	795020	795020	795020